

# VOICE CHANGING MICROPHONE BOOK

Sing high, sing low, sing with an echo! 4 voice modes on the microphone make sing-along time super silly and fun.

*Multi-mode microphone encourages exploration and learning through play*

*Music and singing inspire confidence and self-expression*

*Songs about favorite characters keep young readers engaged*



**Disney Princess: Princess Sing-Along**  
ISBN 978-1-4508-7605-6  
ITEM# 7689400



**Mickey Mouse Clubhouse: Silly Sing-Along**  
ISBN 978-1-4508-7604-9  
ITEM# 7689300



**My Little Pony: Silly Sing-Along**  
ISBN 978-1-5037-1384-0  
ITEM# 7756200

11" x 11"

Case-bound board book

6 spreads (5 content)

Detachable microphone module

5 song buttons play 10 songs

4 voice-mode buttons

1 on/off button

3 replaceable AAA batteries included